

COIN COLLECTORS — PREPAY
176 (C, D, G, H)
COMMON BATTERY — CONNECTIONS

Note 1: In some upper housings, transfer contacts may be designated W, BB, YY, BK-YY, and Y, respectively. Terminal 5 is always furnished.


Note 2: Dotted lines in diagram show manual set connections.

Note 3: When a 61R filter is required for radio frequency suppression, move yellow dial lead from Y upper housing contact spring to filter bracket terminal and connect filter leads as follows:

Yellow lead to filter bracket terminal


Black lead to No. 5 upper housing contact

Red lead to Y upper housing contact.

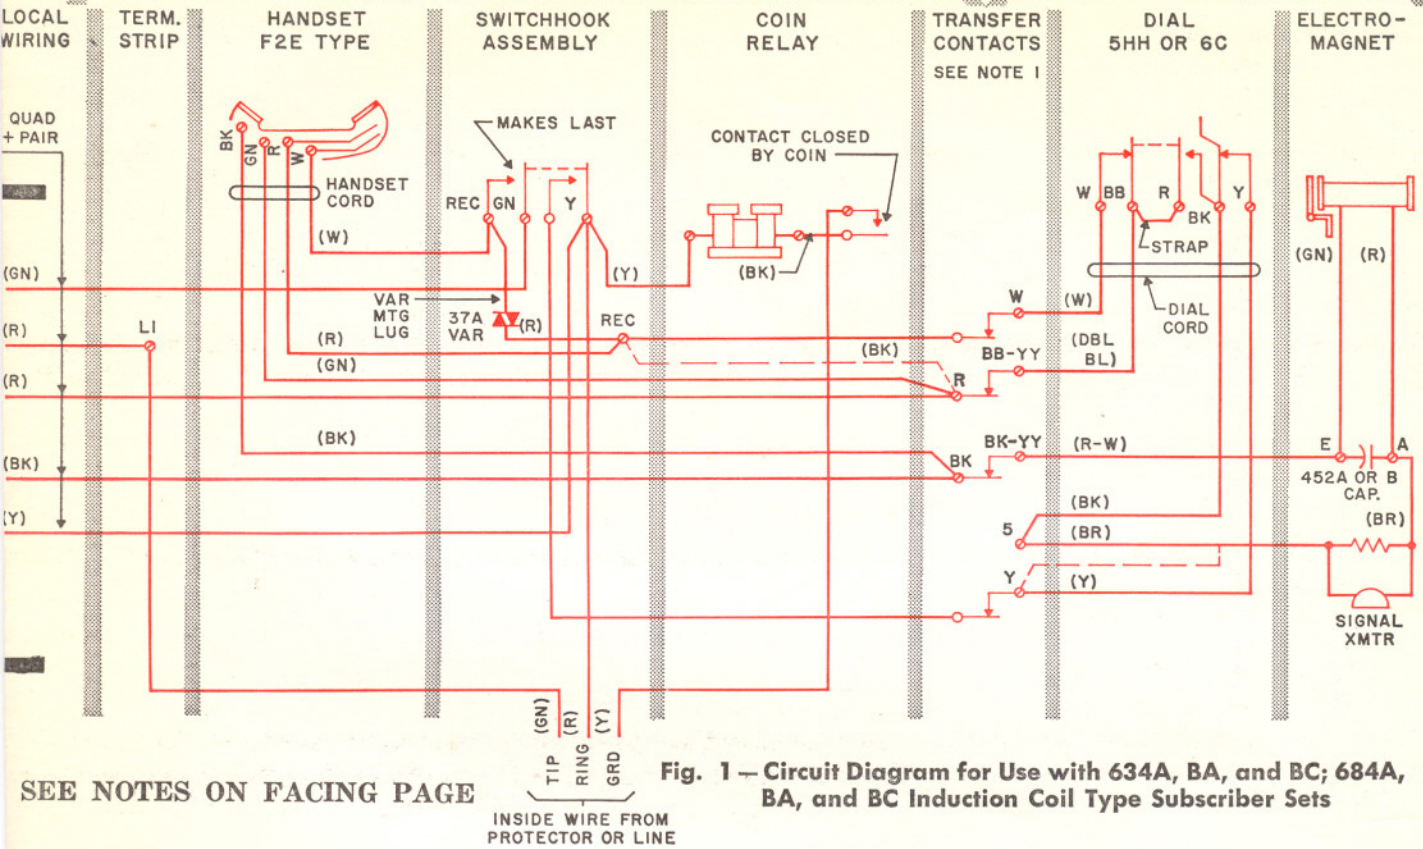

SEE NOTES ON FACING PAGE

Fig. 1 - Circuit Diagram for Use with 634A, BA, and BC; 684A, BA, and BC Induction Coil Type Subscriber Sets

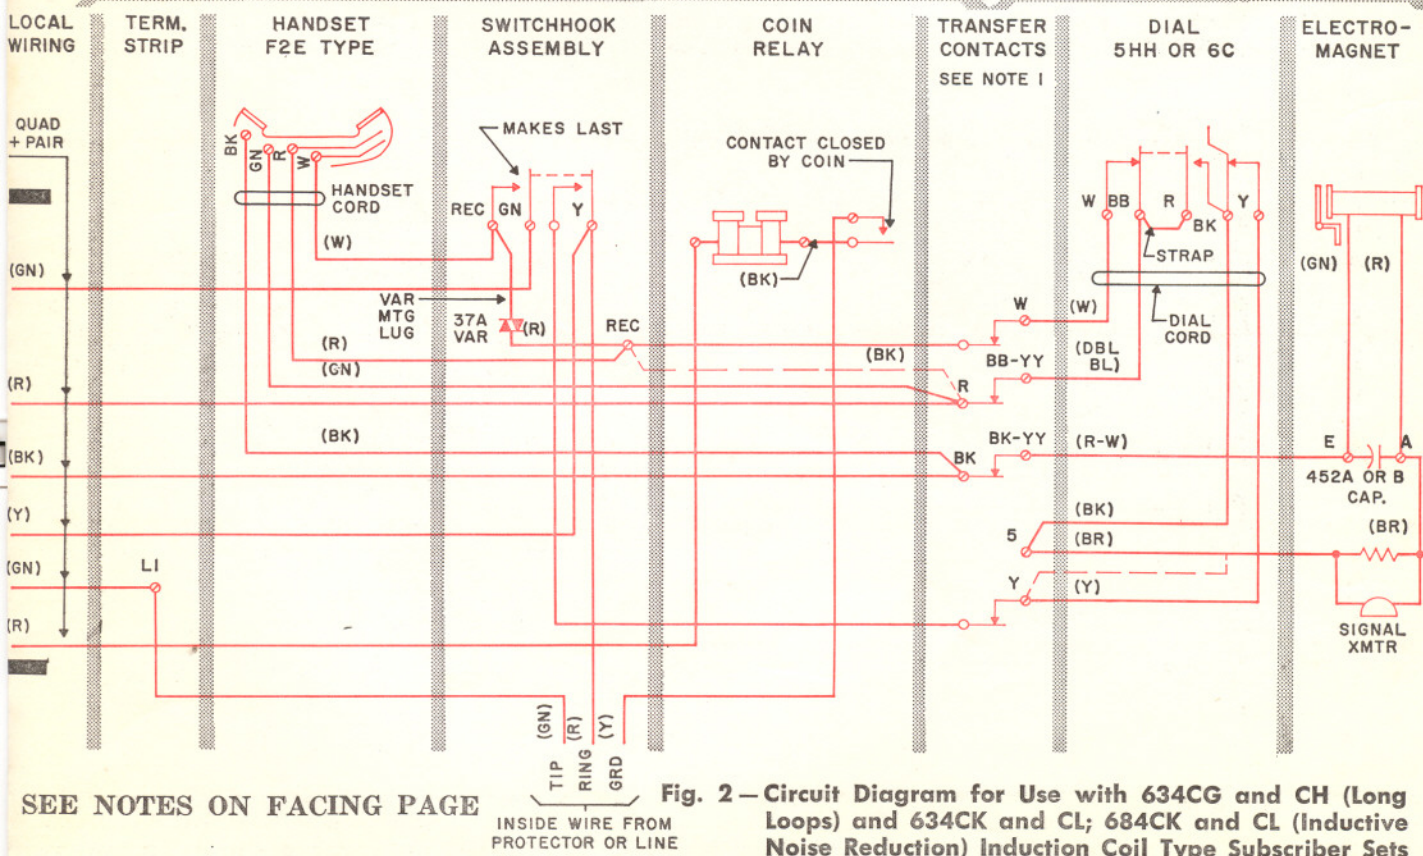

SEE NOTES ON FACING PAGE

Fig. 2 - Circuit Diagram for Use with 634CG and CH (Long Loops) and 634CK and CL; 684CK and CL (Inductive Noise Reduction) Induction Coil Type Subscriber Sets